Vixen®

ケーブルレリーズブラケット説明書

使用イメージ

株式会社 ビクセン
〒359-0021 埼玉県 所沢市 東所沢 5-17-3
[代　　表] TEL：04-2944-4000 FAX：04-2944-4045
[ホームページ] http://www.vixen.co.jp

54キ-1-(8167)-0.5S-(水)

はじめに

このたびは、ビクセン「ケーブルレリーズブラケット」をお買い求めいただき、誠にありがとうございます。
本製品はカメラ用ケーブルレリーズを取付けるためのブラケットです。
ケーブルレリーズは別売となっておりますので、別途お買い求めください。
バッテリーやメモリーカード・フィルムの交換時にこの製品の取外しが必要となる場合がありますので、各種カメラやケーブルレリーズに付属の取扱説明書を併せてお読みください。

構成部品一覧表

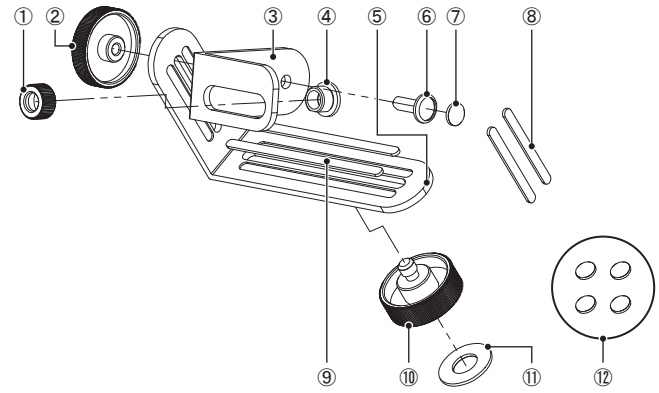

部品番号	部 品 名	個数	部品番号	部 品 名	注　記	個数
①	レリーズホルダーナット	1	⑦	角度変更ボルト用ゴム	⑥角度変更ボルトに貼付	1
②	角度変更ナット	1	⑧	側面ゴム	⑤本体ステーに貼付	2
③	レリーズステー	1	⑨	下敷きゴム	⑤本体ステーに貼付	2
④	レリーズホルダー	1	⑩	カメラ固定ネジ	—	1
⑤	本体ステー	1	⑪	カメラ固定ネジ用ゴム	⑩カメラ固定ネジに貼付	1
⑥	角度変更ボルト	1	⑫	シャッターボタン保護ゴム	同梱部品	4

取付けできるカメラ・ケーブルレリーズのサイズ

カ　メ　ラ	
❶	シャッターボタン位置は突起部を含め22mm以内
❷	カメラの高さの最大は突起部を含め80mm以内
❸	三脚ネジ穴中央までの長さは突起部を含め80mm以内
ケーブルレリーズ	
❹	12mm以上
❺	7mm以内

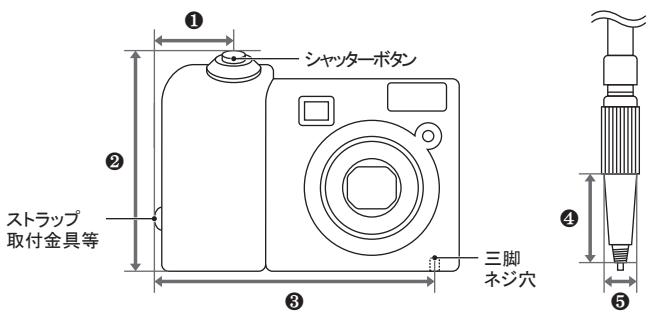

コンパクトカメラへの取付け方法①

⑴ カメラのシャッターボタンにシャッターボタン保護ゴムを取付けます。
　このとき、シャッターボタンに汚れ等が付着していますと保護ゴムの粘着シートがはがれやすくなり、紛失につながります。カメラの説明書にありますお手入れ方法に従いクリーニングを行なってください。

⑵ 角度変更ナットをゆるめ、レリーズステーを上にずらします。一番上まで引き上げましたら、角度変更ナットを軽くしめ、各パーツが急に動かない程度にしめつけます。
　しめつけが足りないとパーツが動きカメラ等にキズを付けてしまう場合がありますのでご注意ください。

⑶ 市販のケーブルレリーズ(注意※1)をレリーズホルダーに取付けます。強くしめ過ぎますとパーツを破損する場合がありますのでご注意ください。
　また、本製品をカメラ本体に取付けた後にケーブルレリーズを取付けますと、カメラの電源を入れたときにシャッターボタンが押された状態となり、思わぬ誤作動につながる場合がありますのでご注意ください。

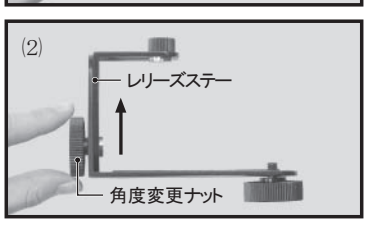

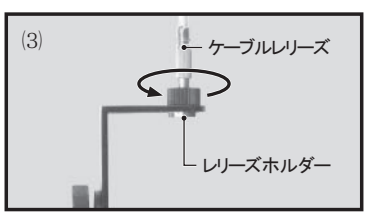

⑷ キズ防止のため柔らかい布などを敷き、レンズ部を上にしてカメラを置きます。角度変更ボルトがカメラ本体に接触しないように注意しながら、カメラ固定ネジをカメラ本体の三脚ネジ穴に取付けます。
※ 取付けの際はしめ過ぎにはご注意ください。カメラ本体の三脚ネジ穴が破損する場合があります。

⑸ 角度変更ナットとレリーズホルダーナットをゆるめます。ケーブルレリーズを押し込んだときにシャッターボタンの中心付近を押せるよう、レリーズステーの角度と、レリーズホルダーの位置を調整します。調整ができたら各ナットをしめつけます。

⑹ ⑸の調整だけではケーブルレリーズを押し込んだときにシャッターボタンの中心付近を押せるように調整ができない場合、一度、カメラ固定ネジをゆるめて本体ステーを回転させ、しめつけることによりレリーズホルダーの位置を前後に微調整することができます。

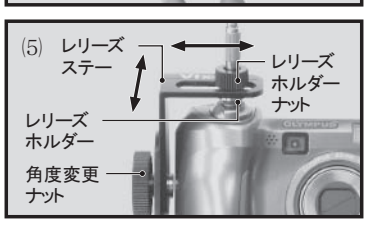

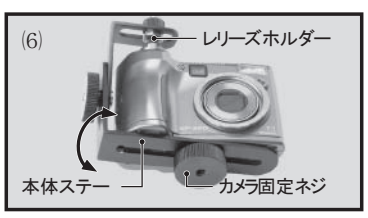

コンパクトカメラへの取付け方法②

⑺ カメラの電源を入れ、ケーブルレリーズの操作が確実かつスムーズに行えることを確認しましょう。引っかかったように感じる場合は、ケーブルレリーズが折曲がっていないか、またシャッターボタンを押す位置がずれていないかを確認し、スムーズな動きが得られるように⑸⑹の調整を繰り返します。(注意※2)

⑻ スムーズにシャッターボタンを押すことができればケーブルレリーズブラケットの取付けは完了です。
　取外しの際はカメラを傷付けないように注意し、逆の手順で行ってください。(注意※3)(注意※4)

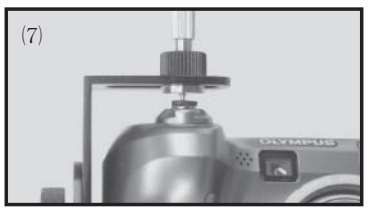

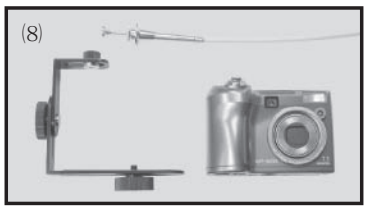

(注意 ※1)
本製品に適合する市販品(取付けできるカメラ・ケーブルレリーズのサイズ参照)をご使用ください。
天体写真撮影用としてご使用の場合は(オート)ストップ機構付きを推奨いたします。
ケーブルレリーズのご使用方法は、その製品に付属しております説明書をご覧ください。

(注意 ※2)
古いケーブルレリーズや動きの渋くなったものなどは、振動によるブレやシャッターチャンスを逃す原因となります。必ず動作の確認を行った上でご使用ください。

(注意 ※3)
バッテリーやメモリーカード等の交換の際、ケーブルレリーズと本製品の取外しが必要となる場合がございます。本製品を取付けたまま無理に交換等を行いますと、カメラやケーブルレリーズを破損したり、データを消失する原因となります。

(注意 ※4)
カメラ固定ネジの底面に三脚取付けネジが切られています。市販のカメラ三脚やユニバーサルデジタルカメラアダプター等と併用してご使用いただけます。

ユニバーサルデジタルカメラ
アダプターと併用した例

Vixen®

Instruction Manual for Cable Release Bracket

Vixen Co., Ltd. 5-17-3 Higashitokorozawa,Tokorozawa,Saitama359-0021, Japan
http://www.vixen.co.jp Phone +81-4-2944-4141(International)
Fax +81-4-2944-9722(International)

Vixen Europe GmbH Siemensring 44c, D-47877 Willich, Germany
http://www.vixen-europe.com Phone 02154/8165-0
Fax 02154/8165-29

Shown with a digital camera sold separately.

Preface

Thank you for your purchase of a Vixen cable release bracket.
This product is a bracket for installing a camera cable release on it. The camera cable release is sold separately. Purchase one that is appropriate to your camera. It may be necessary to detach your compact digital camera or camera cable release from the cable release bracket when you exchange the battery or data memory card. For details please refer to instructions on your camera or camera cable release.

Dimensions of Camera and Camera Cable Release available for this product

	Maximum dimensions of camera
❶	22mm in distance from the side of the camera body (incl. projection) to the center of the shutter button
❷	80mm in height from the bottom of the camera body to the top (incl. projection)
❸	80mm in distance from the side of the camera body (incl. projection) to the tripod socket.
	Minimum dimensions of camera cable release
❹	More than 12mm in length
❺	Less than 7mm in width

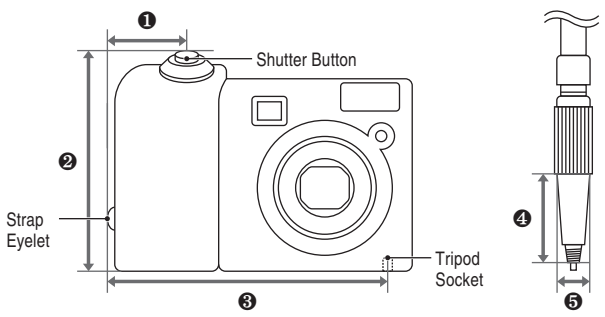

Parts Descriptions

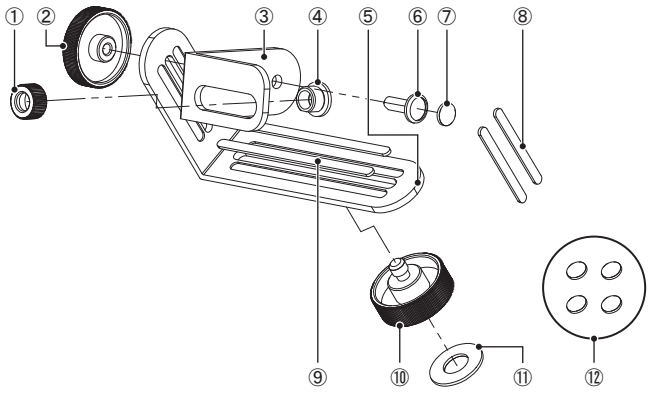

Part Number	Part Name	Quantity	Part Number	Part Name	Quantity
①	Cable release retaining nut	1	⑦	Protection rubber (Pre-attached on the angle bolt)	1
②	Angle setting nut	1	⑧	Protection rubbers (Pre-attached on the side of the camera bracket)	2
③	Cable release bracket	1	⑨	Protection rubbers (Pre-attached on the bottom of the camera bracket)	2
④	Cable release head holder	1	⑩	Fixing screw	1
⑤	Camera bracket	1	⑪	Protection rubber (Pre-attached on the fixing screw)	1
⑥	Angle bolt	1	⑫	Shutter protection rubbers	4

Attaching the Cable Release Bracket to a Compact Digital Camera

(1) Attach the shutter protection rubber onto the shutter button of the camera. Any strain on the shutter button may prevent the shutter protective rubber from sticking on it securely and it will lead you to the loss of the shutter protection rubber. Make sure to clean the shutter button before you put the shutter protective rubber on it.

(2) Loosen the angle setting nut and shift the cable release bracket fully to the upright position. Then, tighten the angle setting nut until the cable release bracket is locked stably. Insufficient tightening of the angle setting nut may result in scratching the camera.

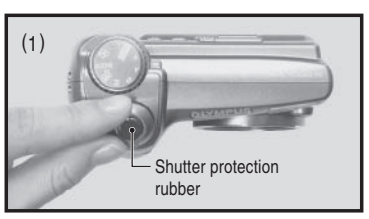

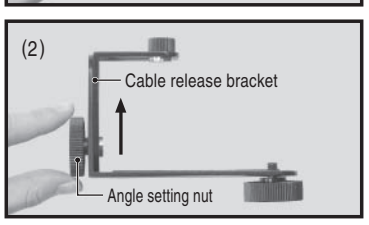

(3) Attach a commercially available cable release to the cable release head holder*1. Do not forcedly screw the cable release into the cable release head holder as it may damage the threads. Be sure to attach the cable release into the cable release head holder before you mount the camera on the camera bracket.

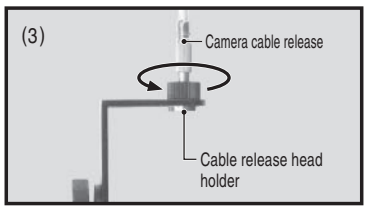

(4) Place the camera on a soft cloth with the lens facing upward to avoid scratching the camera body. Install the camera onto the camera bracket so as not to hit the side of the camera body against the tip of the angle bolt, but as close as possible. Fix the camera on the camera bracket by tightening the fixing screw into the tripod socket on the bottom of the camera.

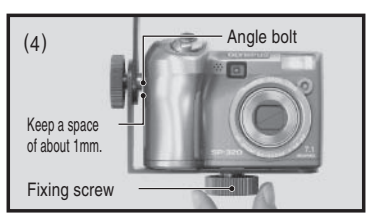

(5) Loosen the angle setting nut and the cable release head holder and adjust the angle of the cable release bracket so that the cable release head comes just above the shutter button. Confirm if the tip of the cable hits the center of the shutter button when the cable is pushed down. Then tighten the angle setting nut and cable release head holder again.

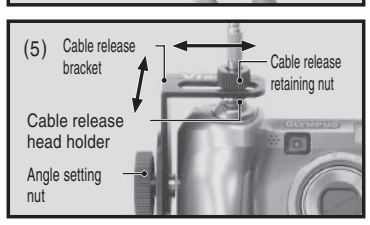

(6) If the adjustment above (5) is not successful and the cable does not hit the center of the shutter button, loosen the camera fixing screw and move the camera bracket back and forth slightly so that the cable release head comes just above the center of the shutter button.

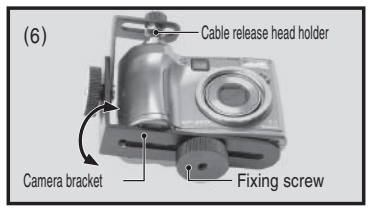

Using the Cable Release Bracket with a Compact Digital Camera

(7) Turn on the power of the camera and confirm that the camera cable release works correctly and smoothly when the cable is pushed down. When you feel a clogging of the cable, check if the cable is forcedly bent halfway or check if the tip of the cable is away from center of the shutter button. If this is the case, repeat the procedures (5) and (6) until you get smooth movements.*2

(8) You are successful in attaching the cable release bracket if you can push down the cable smoothly without clogging. Take reverse procedures with care not to scratch the camera body when you remove the camera from the cable release bracket. *3,*4

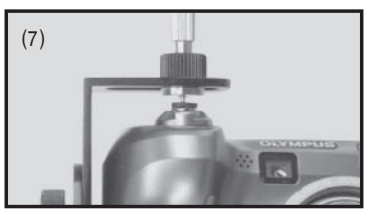

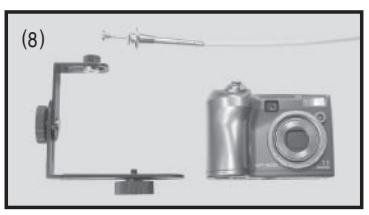

*1 Use a compact camera that is appropriate to the specifications of this cable release bracket.
When you use the cable release bracket for astrophotography, a camera cable release with self-stopper is recommended. Please read instructions for the camera cable release use it correctly.

*2 Using an aged or a stiff camera cable release may cause blurring by vibration or missing a shutter chance. Check movements of the camera cable release before you use it.

*3 You may need to detach the camera cable release from the cable release bracket when you exchange the battery or data memory card. Do not attempt exchanging the battery or data memory card forcedly with the camera attached. The camera may damage or the data may disappear.

*4 There is a tripod socket on the bottom of the camera fixing screw. The cable release bracket can be used with a camera tripod and it will be convenient to use in conjunction with an optional universal digital camera adapter.

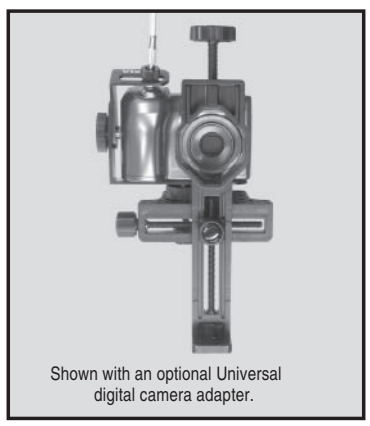

Shown with an optional Universal digital camera adapter.